

***FIRECOM*, Inc.**

Part no: F900-790 XP95A Dual Input Monitor Module Installation Instructions

General

The XP95A Dual Input Monitor Module, part no F900-790, is supplied without an electrical box for flush fitting. For flush fitting the installer will need to provide a suitable metal box, a 4" electrical box or equivalent.

Note: The XP95A Dual Input Monitor Module is not designed for outdoor use unless it is mounted in a suitable weatherproof enclosure.

Installation

1. Mount the electrical box as required and install all cables for termination.
2. Terminate all cables.
3. Set the address of the unit as shown on page 3.
4. Drill holes in the fascia plate corresponding to the threaded holes on the mounting box selected. (Fig 1)
5. Gently push the completed assembly towards the back box until the mounting holes are aligned and secure with the mounting screws provided. **Do not overtighten.**
6. Commission the unit.

Wiring Details

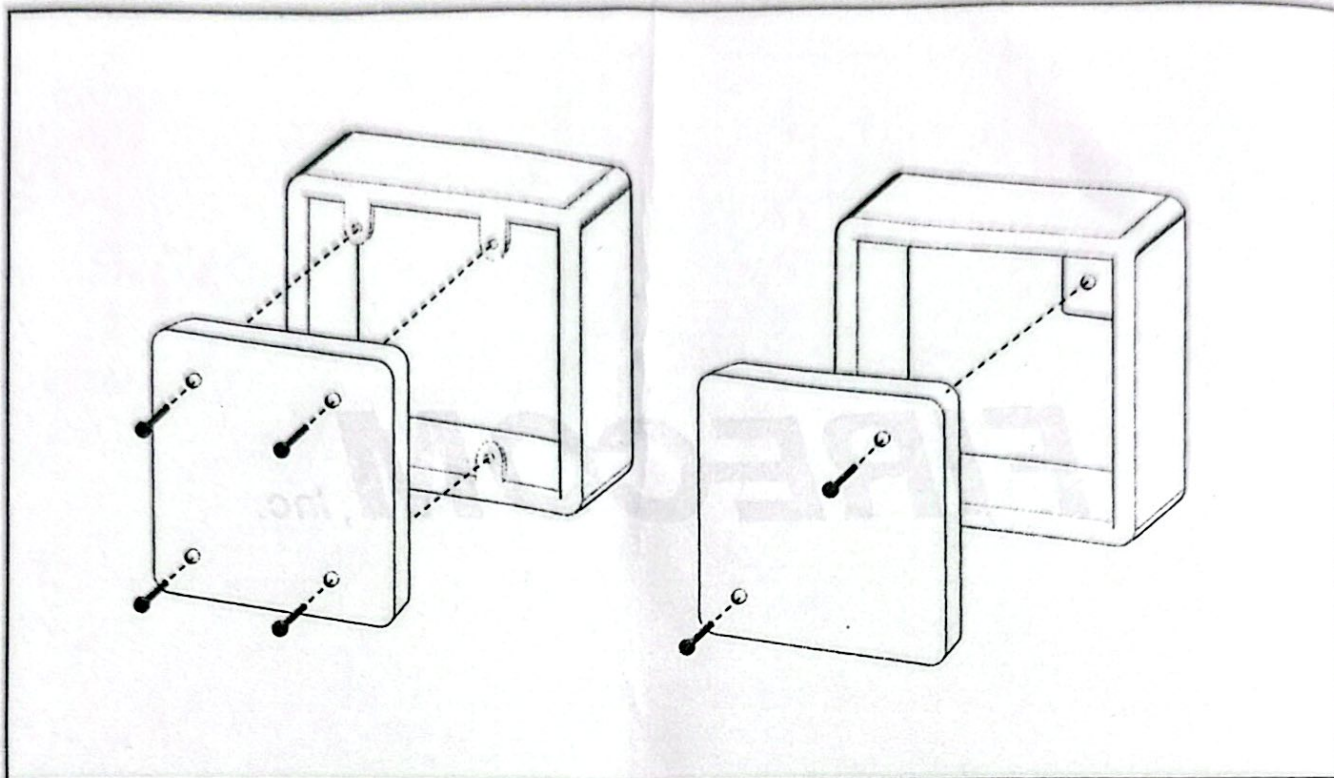


Fig 1. Mounting the XP95A Dual Input Monitor Module

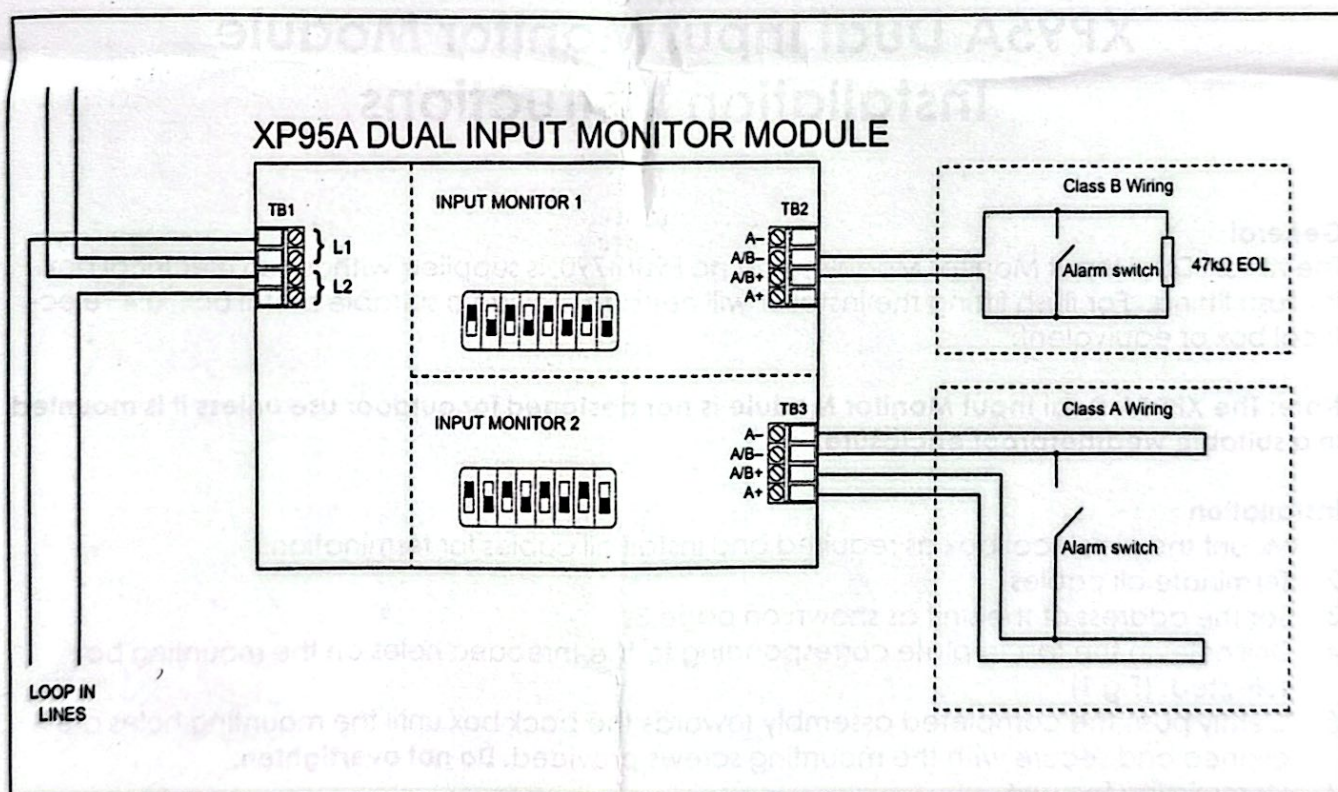


Fig 2. Wiring Diagram for XP95A Dual Input Monitor Module

Note: All wiring is power limited and supervised.

All wiring must conform to applicable local codes, ordinances and regulations eg NFPA 72.

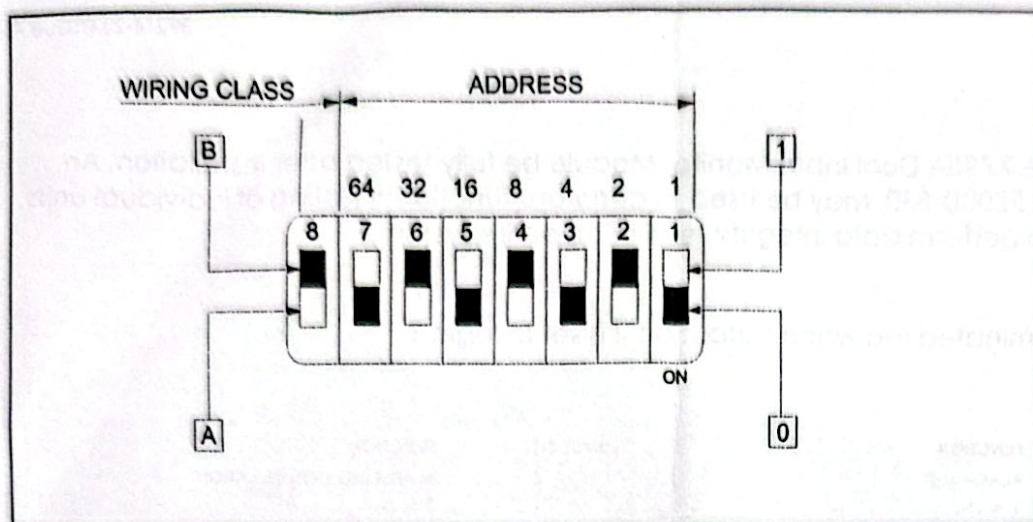


Fig 3. DIL Switch.

Current consumption at 24V

switch-on surge, max 65ms	2.5mA
quiescent, 47kΩ EOL fitted	1.5mA
switch input closed (alarm), LED on	10.0mA
switch input short circuit	6.0mA

Address Setting

Segments 1-7 of the DIL switch are used to select the address of the module. Each of the seven segments must be set to '0' (ON) or '1' (OFF) using a small screwdriver or similar tool. A complete list of address settings is shown below. (The eighth segment of the switch is used to select Class A or B wiring).

addr	DIL switch setting 1234567	addr	DIL switch setting 1234567	addr	DIL switch setting 1234567	addr	DIL switch setting 1234567	addr	DIL switch setting 1234567
1	1000000	11	1101000	21	1010100	31	1111100	41	1001010
2	0100000	12	0011000	22	0110100	32	0000010	42	0101010
3	1100000	13	1011000	23	1110100	33	1000010	43	1101010
4	0010000	14	0111000	24	0001100	34	0100010	44	0011010
5	1010000	15	1111000	25	1001100	35	1100010	45	1011010
6	0110000	16	0000100	26	0101100	36	0010010	46	0111010
7	1110000	17	1000100	27	1101100	37	1010010	47	1111010
8	0001000	18	0100100	28	0011100	38	0110010	48	0000110
9	1001000	19	1100100	29	1011100	39	1110010	49	1000110
10	0101000	20	0010100	30	0111100	40	0001010	50	0100110
51	1100110	61	1011110	71	1110001	81	1000101	91	1101101
52	0010110	62	0111110	72	0001001	82	0100101	92	0011101
53	1010110	63	1111110	73	1001001	83	1100101	93	1011101
54	0110110	64	0000001	74	0101001	84	0010101	94	0111101
55	1110110	65	1000001	75	1101001	85	1010101	95	1111101
56	0001110	66	0100001	76	0011001	86	0110101	96	0000011
57	1001110	67	1100001	77	1011001	87	1110101	97	1000011
58	0101110	68	0010001	78	0111001	88	0001101	98	0100011
59	1101110	69	1010001	79	1111001	89	1001101	99	1100011
60	0011110	70	0110001	80	0000101	90	0101101	100	0010011
101	1010011	111	1111011	121	1001111				
102	0110011	112	0000111	122	0101111				
103	1110011	113	1000111	123	1101111				
104	0001011	114	0100111	124	0011111				
105	1001011	115	1100111	125	1011111				
106	0101011	116	0010111	126	0111111				
107	1101011	117	1010111						
108	0011011	118	0110111						
109	1011011	119	1110111						
110	0111011	120	0001111						

Commissioning

It is important that the XP95A Dual Input Monitor Module be fully tested after installation. An XP95 Test Set, part no 55000-870, may be used to carry out functional testing of individual units. It can also be used to perform data integrity tests of an entire system.

LED Indicators

- ⊙ Alarm Illuminated red when output bit 2 is set to logic 1.

Functional Test Data

OUTPUT BIT	FUNCTION	INPUT BIT	FUNCTION
2	ALARM LED 1 = ON 0 = OFF	2	ALARM LED CONFIRMATION 1 = ON 0 = OFF
1	REMOTE TEST 1 = TEST ENABLED 0 = NORMAL	1	INDICATES WIRING CLASS 1 = CLASS B* 0 = CLASS A
0	NOT USED	0	ALARM STATUS 1 = ALARM 0 = NORMAL

* Note: Toggles to '0' in alarm.

Troubleshooting

Before investigating individual units for faults, it is very important to check that the system wiring is fault free. Earth faults on a data loop or any ancillary zone wiring may cause communication errors.

Many fault conditions are the result of simple wiring errors. Check all connections to the unit and make sure that the correct value resistors are fitted where necessary.

Fault finding

Problem	Possible Cause
No response or missing	Incorrect address setting Incorrect loop wiring
Fault condition reported	Incorrect input wiring
Analog value unstable	Dual address Loop data fault, data corruption
Constant Alarm	Incorrect wiring Incorrect end-of-line resistor fitted

Compatibility

Connect XP95A Dual Input Monitor Module to compatible alarm control panels. Contact Firecom for further details.

Firecom Inc, 39 - 27 59th Street, Woodside, New York, 11377
Tel +1 718 899 6100 Fax +1 718 899 1932
Website: www.firecominc.com